



COUPLER MOUNTED BRACKET for Cushioned Cars



weighs only 33 lbs


Easy Installation

- Clamps directly to the coupler
- Can be installed in approximately 15 minutes
- Common tools required for installation include: Ratchet, 15/16" Deep Socket, 3/4" Socket, Flat Screwdriver and Pliers

For changes to arrangements beyond allowable per Rule 6, car owner approval must be obtained to install the CMB. Contact Strato for an assessment of compatibility by specific car class and series. Care must be taken to ensure the CMB cannot come into contact with any carbody components.



**Call our customer service
at 800.792.0500 or
scan the QR code on the
left to see installation
instructions on our website.**

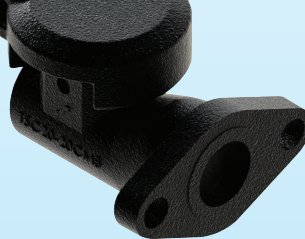

**Multiple Trainline Support
Configurations Available**

www.stratoinc.com

Customer Service: 800-792-0500 | Fax: 800-378-7288 | customerservice@stratoinc.com

COUPLER MOUNTED BRACKET

Prevents Hose Separations

Keeps the trainline support casting in a fixed position in relation to the coupler thus reducing stress on gladhand connections and preventing hose separations.


Heavy Duty Casting

Designed to withstand 6,000 lbs. load longitudinally and 250 lbs. load vertically.

AAR Approved for S-4021, S-427 & other Long Shank Coupler Applications

Rule 6

Job Code 1632

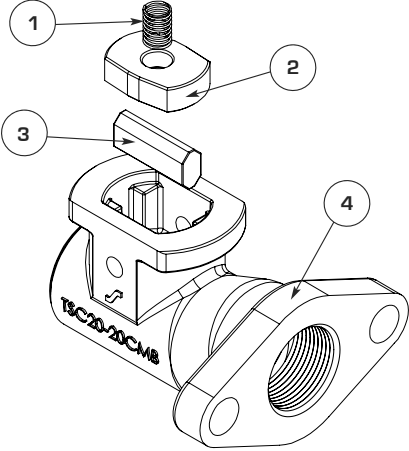PART #	Coupler Mounted Bracket - Trainline Support Casting with Flange																						
CMBA2	<table border="1"><thead><tr><th>PART #</th><th>Trainline Support Casting Replacement Kit</th></tr><tr><th>Item No.</th><th>Part Number</th><th>Description</th><th>QTY</th></tr></thead><tbody><tr><td>1</td><td>CMB-08</td><td>Compression Spring</td><td>1</td></tr><tr><td>2</td><td>CMB-04</td><td>Swivel Lifting Key</td><td>1</td></tr><tr><td>3</td><td>CMB-05</td><td>Key Lifter</td><td>1</td></tr><tr><td>4</td><td>TSC20-20CMB</td><td>Trainline Support Casting with Flange</td><td>1</td></tr></tbody></table>	PART #	Trainline Support Casting Replacement Kit	Item No.	Part Number	Description	QTY	1	CMB-08	Compression Spring	1	2	CMB-04	Swivel Lifting Key	1	3	CMB-05	Key Lifter	1	4	TSC20-20CMB	Trainline Support Casting with Flange	1
PART #	Trainline Support Casting Replacement Kit																						
Item No.	Part Number	Description	QTY																				
1	CMB-08	Compression Spring	1																				
2	CMB-04	Swivel Lifting Key	1																				
3	CMB-05	Key Lifter	1																				
4	TSC20-20CMB	Trainline Support Casting with Flange	1																				


STRATO COUPLER MOUNTED BRACKET

PART #
CMBA2-45

Coupler Mounted Bracket - 45° Trainline Support Casting with Flange

For use when Dead Lever Bracket may interfere with CMBA or Intermediate Hose Assembly.

Examples of interference:

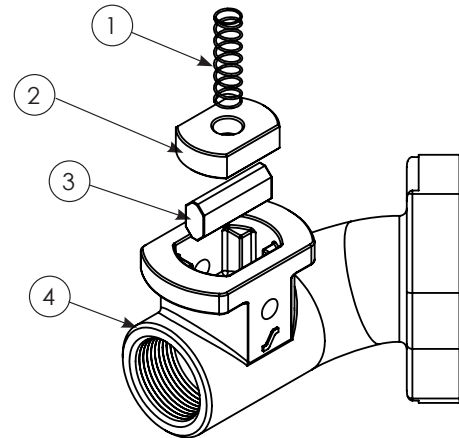

PART #
CMB-PK4


**Trainline Support Casting
Replacement Kit**

Item No.	Part Number	Description	QTY
1	CMB-08	Compression Spring	1
2	CMB-04	Swivel Lifting Key	1
3	CMB-05	Key Lifter	1
4	TSC20-20CMB-45	Trainline Support Casting with Threaded Flange	1

**45° Trainline
Support Casting
in application**



Hardware Replacement Parts: Installation Hardware included with each Coupler Mounted Bracket Kit

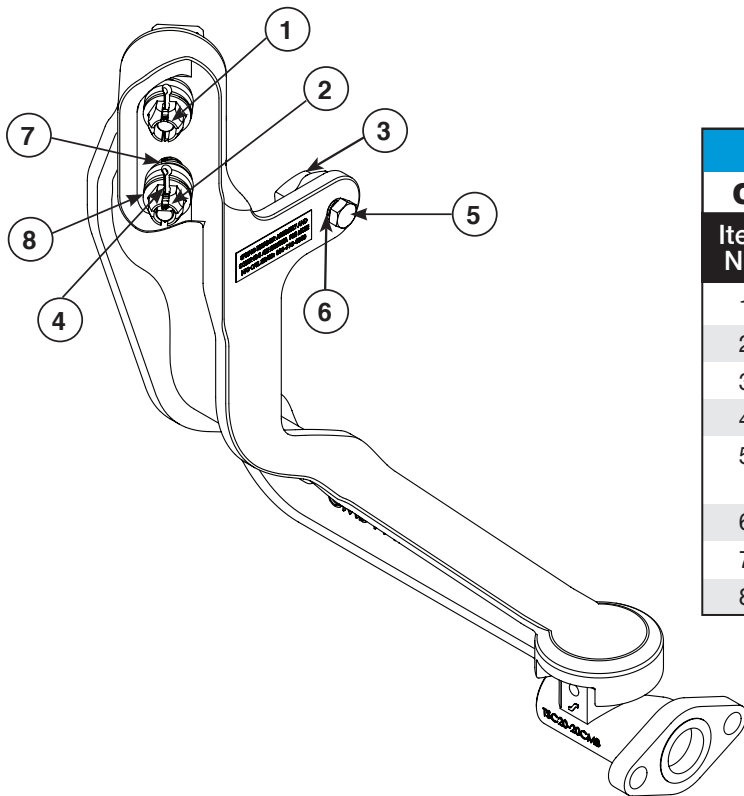


PART #			
CMB-PK1			
Item No.	Part Number	Description	QTY
1	CMB-02	Top Clamp	1
2	CMB-03	Bottom Clamp	1
3	CMB-06	Axial Mounting Clamp	1
4	CMB-09	5/32" x 1-1/2" Cotter Pin	2
5	CMB-11	1/2"-13 x 1-3/4" Grade 8 Hex Head Cap Screw with Thread Coating	1
6	CMB-12	1/2" Internal Tooth Lock Washer	1
7	CMB-14	Belleville Washer (1914 LB Flat)	2
8	CMB-16	CMB Spring Retainer Assembly	2

Patented Attachment Mechanism

Spring Loaded Adjusting Mechanism (SLAM)

- Holds casting firmly to the coupler head
- Self adjusts up to 3/16" slack

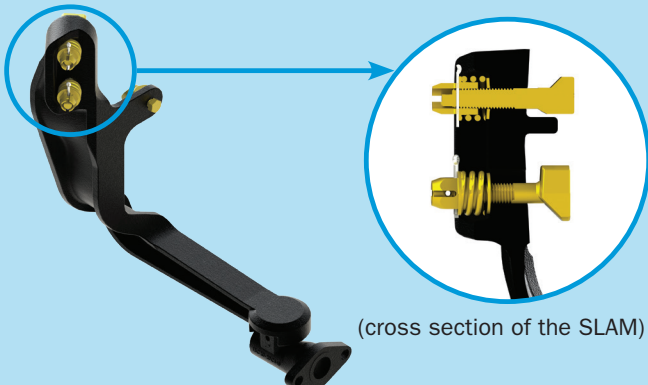

Cast Safety Hook & Fastener w/ Loctite

